User Manual

I Basic Function:

1. The screen can support 128x64,Car LCD 3x9
2. Transmit Support,6001S,KT0803K,QN8027,BK1085
3. Support MP3 format
4. Full Frequency (87.5MHz-108.0MHz)
5. Support SD/TF card and USB disk
6. Folder select function(100 folders),can display the folder name
7. Use 00FF code value 21# remote control
8. Resume function: it may memorize the song, frequency and volume when the power is broken off (muct be with IC24C02)

II. Operate Function Introduction and Operation Method of each Function

1. ADKEY Function Introduction:

Play、Pause、Repeat、Folder、（PLAY/PAU button）	Next Song/ Increase Volume（long press）（NEXT/VOL+ button）	Previous Song/ Decrease Volume、（PRE/VOL- button）	Increase Frequency、(CH+ button)	Decrease Frequency、（CH- button）

2. ADKEY Function Operation Step:

A. Play/Pau: In the status of playing music,press “Play/Pau” button can stop the music,screen display PAUSE;press again PLAY,the screen enter into the main interface.

B. Repeat mode:In the status of playing music,long press “Play/Pau” button can enter into the repeat mode,it can change one kind of repeat mode after each time long press;there are total 4 repeat modes: Repeat All,Random,Repeat List, Repeat Single;(note:if Random and Repeat List need to quit,then repeat need to be rechoosed)Display Way of Each Screen:
   a. LCD screen display:A Repeat All,S Random,F Repeat List,1 Repeat Single
   b. LED screen display:CA CS FD CR

3. Change Music:

short press “NEXT/VOL+” button or “NEXT” button as next song
short press “PRE/VOL-” button or “PRE” button as previous song

4. Change Frequency:

Increase Frequency: press ”CH+”,short press to add 0.1,long press(0.5 seconds) to +1,the screen display the currently frequency numbers,if no actions after 3 seconds,then it will enter into the main interface.

Decrease Frequency: press ”CH-”,short press to add 0.1,long press(0.5 seconds) to -1,the screen display the currently numbers,if no actions after 3 seconds,then it will switch to the main interface.

Adjust Frequency: press “CH” button within 3 seconds,then press “NEXT/VOL+” (“PRE/VOL-”) button,the frequency can up to add(reduce) 0.1; Long press “NEXT/VOL+” (“PRE/VOL-”) button,the frequency can up(down) to add (reduce) 1 one by one,the screen display currently frequency numbers, if no actions after 3 seconds,then it will switch to the main interface.

5. EQ Mode: 6 EQ modes,press “EQ” button,LED screen display E1…E6,LCD screen display the english name of 6 EQ modes:CLASSICAL/BASS/LIVE/ROCK/POP/NORMAL;

6. Folder Function:can display 100 folders,can’t display if over 100，but the folders after 100 can play if in Random and Repeat Order mode.

A. 1) short press”Play/Pau”,to stop the music,then long press”Play/Pau”,screen display ”FD” and enter into the currently playing folders, screen display this folder number as N number.

2) short press”NEXT/VOL+” or “PRE/VOL-” button enter into folder selection,short press one time,folder list increase(decrease) one number.

B. Folder playing order: When SD card or USB disk was detected by device,system will scan all folders in the disc,then play by order.

7. Memory Function: it may memorize the song, frequency ,volume and folder when power off.

8. Adjust the Volume:

A. Long press “NEXT/VOL+” (“PRE/VOL-“) button,the volum will be increased (decreased) to the Max. or the Min.;
B. Short press “VOL+/VOL-” button, the volum will be increased (decreased) to the Max. or the Min.;

III. Remote Control Function:

1. **Choose song:** press the numeric key directly,it will switch to that song automaticly after 3 seconds,at the same time, screen switch to the main interface.If the song is not inluded U-disk or SD card,then screen will display “ERROR”.

2. **Folder:** press “200+” button and jump to the next folder,at the same time,playing the songs in this folder ;press “100+” button and jump to the previous folder,at the same time,playing the songs in that folder,and then enter into the main interface after 3 seconds.

3. **Change Frequency:**

   Increase Frequency: press ”CH+”,short press to add 0.1,long press(0.5 seconds) to +1,the screen display the currently frequency numbers,if no actions after 3 seconds,then it will enter into the main interface.

   Decrease Frequency: press ”CH-”,short press to add 0.1,long press(0.5 seconds) to -1,the screen display the currently numbers,if no actions after 3 seconds,then it will switch to the main interface.

   Choose Frequency: after short press CH,then press numeric key 0.1.2.3….9 to choose frequency,at the same time,screen enter into the main interface;

4. **U/SD switch:** long press ”CH” not only can switch U-disk and SD card,but also can switch frequency icon at the same time.
5. **Change Music:** press “NEXT” button,then music switch to the next song;
   Press “PREVIOUS” button,then music switch to the previous song.
6. **Adjust Volume:** press” + ”/ ” - ” button,the volume will be increased(decreased) up and down.

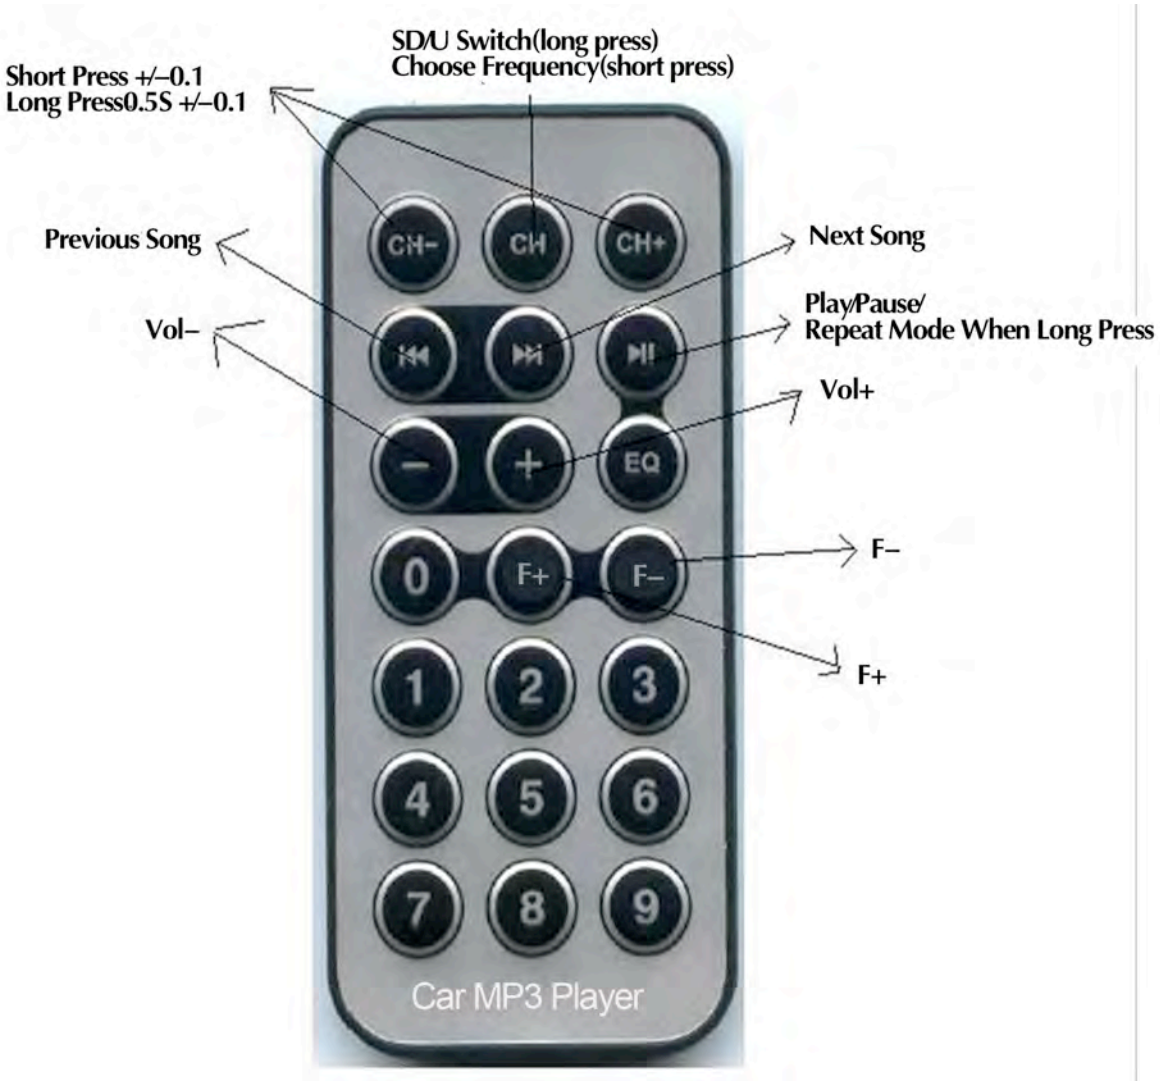
SD/U Switch(long press)
Choose Frequency(short press)
Short Press +/–0.1
Long Press0.5S +/–0.1
Previous Song
Vol–
Next Song
Play/Pause/
Repeat Mode When Long Press
Vol+
F–
F+
CH-
CH
CH+
EQ
0
F+
F–
1
2
3
4
5
6
7
8
9
Car MP3 Player